


Installation Instructions Alpha Trefoil or Single Cable Cleat

- 1) Remove the setscrew, sprung washer and nut. Fix the cleat to the support structure with a securing bolt, washer and nut (supplied upon request).

NOTE:

The cleat may have the optional LSF (plastic base). Installation Instructions are common.

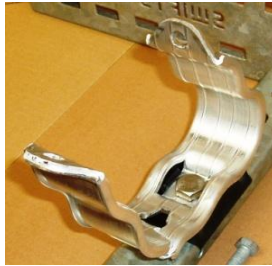

- 2) Install the cables.

NOTE:

Trefoil installation pictured -
Single installation similar



- 3) Replace the setscrew, sprung washer and nut and tighten.

NOTE:

Do not over-tighten. The cleat should secure the cable but does not need to be so tight that the cable bulges at either side of the cleat.

